


Burning Instructions for MediaRange CD-R 90 Min & CD-R 100 Min


In order to be able to use the full capacity of our MediaRange CD-R 90 Min and CD-R 100 Min discs, it is necessary to change some settings in your burning software. Please follow these burning instructions step-by-step to configurate your burning software correctly.

STEP 1 : CHECK THE 'OVERBURN' FUNCTION

Please make sure that your burner is supporting the "Overburn" function. Only if your burner have this requirement, you will be able to use the full capacity of 800MB & 900 MB discs. You can find this information on the data sheet of your burner or by selecting the "Recorder Selection" in the "Recorder" menu (see below :: Burning Software : Nero Burning ROM 7.0)

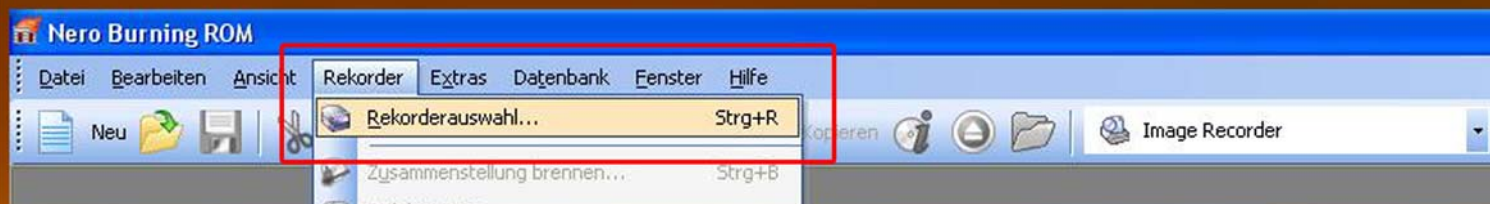

After you have selected your burner you get some information about your burner and also the information that your burner is supporting the "Overburn" function or not. If not, you are unfortunately not able to burn oversized CD-Rs with your burner. For more information about that topic, please visit the support area at our website www.mediarange.de or write an e-mail to support@mediarange.de.

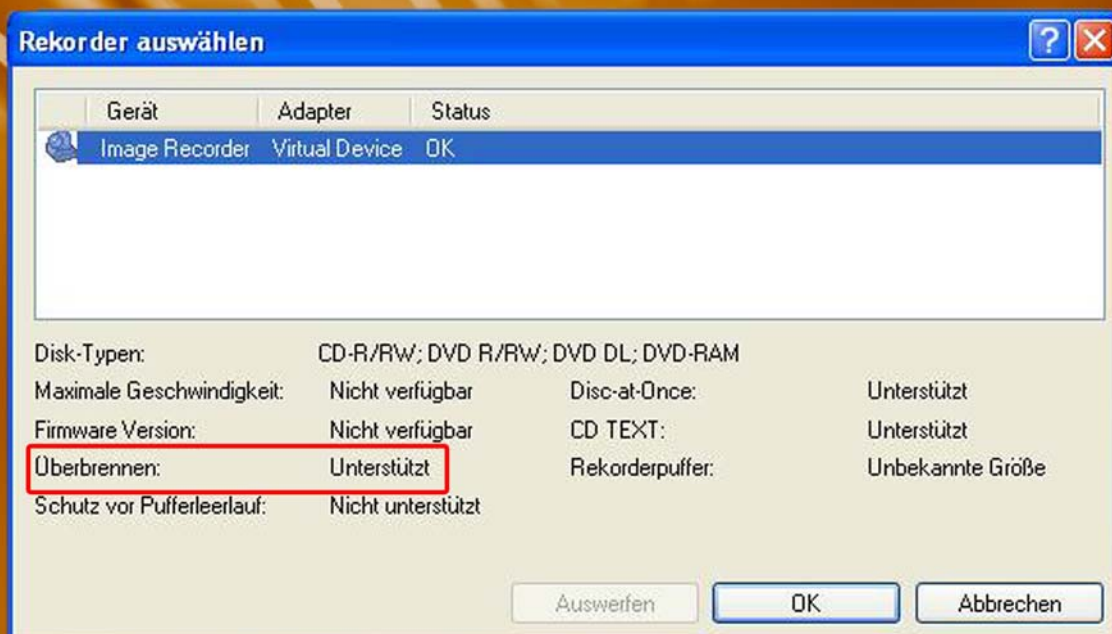


Burning Instructions for MediaRange CD-R 90 Min & CD-R 100 Min

The recognized capacity of 703MB in the Disc Info menu for our MediaRange CD-R 90 Min and CD-R 100 Min is just the maximum capacity the burner can read from the unwritten media and has nothing to do with the current burner or the actual disc capacity.


STEP 2 : SETTINGS MENU

Now please open the settings menu and switch to the “Expert Settings” index file card and activate the overburn function and set the maximum CD length on 99 min 59 sek 74 ff (see below).

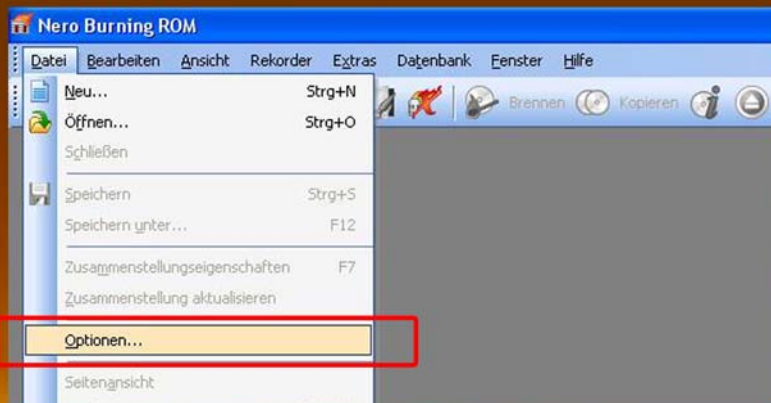

STEP 3 : CD BURNING

After you have prepared your datas as usual, click on the “Burn” icon. After that the following window opens :

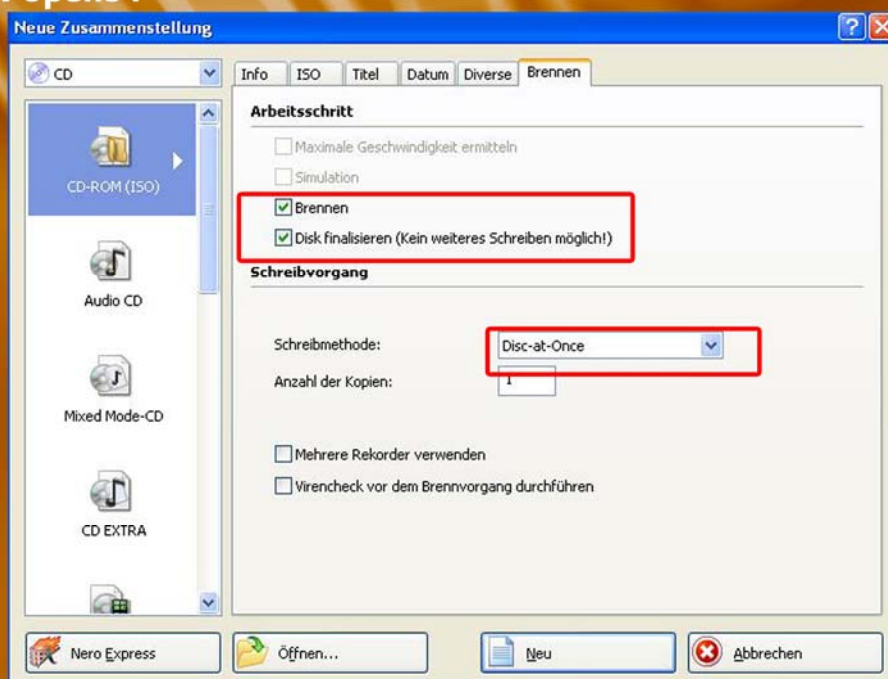


Burning Instructions for MediaRange CD-R 90 Min & CD-R 100 Min

Now you have to change the settings on "Burning Disc-at-Once" and deactivate the multi-session function.

Our MediaRange CD-Rs are writeable up to a speed of 48x. But because of the differences between the burners it is generally recommended that you should use a lower burning speed.

SCHRITT 4 : START BURNING AN 'OVERBURN DISC'

After you have clicked on the "Burn" Icon a new window will open and inform you that you will burn more than 703MB. In order to start burning the CD-R click on "Write Overburn Disc" and your writer starts with the burning process.

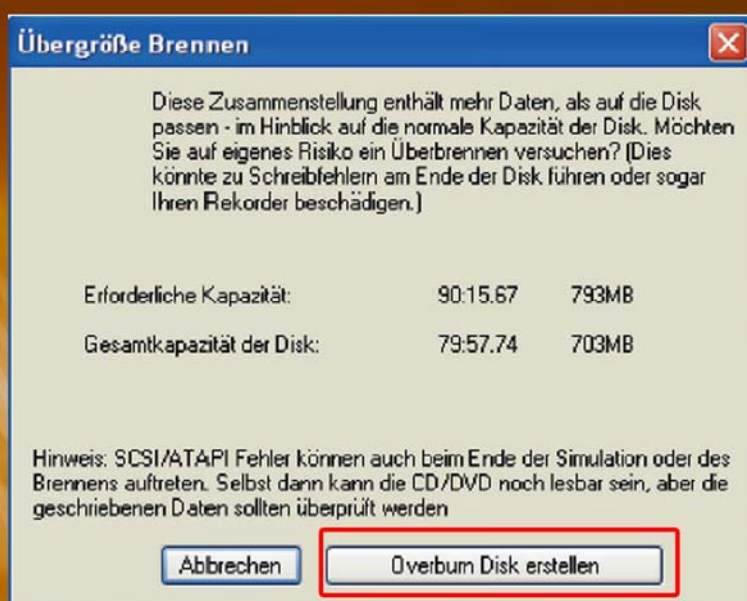

Although we are not aware of any damage to burners cause by burning oversized CD-Rs, we are not to be held liable for your burner

If you have some further questions, please feel free to contact us!

Technichal Hotline : +49 06196 523 81 88

E-Mail : support@mediarange.de

Internet : www.mediarange.de