

MediaRange
ΕΝΣΥΡΜΑΤΟ ΠΛΗΚΤΡΟΛΟΓΙΟ
ME 9 MULTIMEDIA ΠΛΗΚΤΡΑ



GR Εγχειρίδιο χρήσης, Οδηγίες λειτουργίας και ασφάλειας, Όροι εγγύησης

EN User manual, Operating- and safety instructions and warranty conditions



Keyboard layout shown on this manual may vary from product inside. Please see label on the packaging for details. This manual refers to all available layouts of this keyboard model.

ΞΕΚΟΥΡΑΣΤΗ ΧΡΗΣΗ, ΜΟΝΤΕΡΝΟΣ ΣΧΕΔΙΑΣΜΟΣ,
ΕΥΚΟΛΗ ΡΥΘΜΙΣΗ ΥΨΟΥΣ ΚΑΙ
9 MULTIMEDIA ΠΛΗΚΤΡΑ



EN Package contents

- 1x MediaRange Corded multimedia keyboard with 114 keys
- 1x User manual (GR/EN)

EN Operating- and safety instructions

Please read the following operation and safety instructions carefully before using this product to ensure safe and proper use. If these instructions are not followed, you may damage this product and will void your warranty.

- This product is not meant for a commercial use or for medical and special applications, where the failure of the product may cause injuries, death or significant material damages.
- Do not open the product and do not try to repair the product on your own: This will void the warranty and you may risk damages or injuries.
- Do not drop this product or handle roughly and protect it against shock and drops in all operating modes.
- Do not use this product or any of its supplied parts if there is visible damage or if the product is exposed to water or other liquids or when wet.
- Protect this product at any time against fire and water or other liquids.
- Do not use the product in extremely cold, hot, humid or dusty areas.
- Operate this product only in a dry environment between -5°C and 40°C.
- Do not operate this product in areas and places where the use of electronic equipment is not permitted.
- Product images may vary from the actual product. The content of this user manual may be revised without prior notice.
- The mode of operation, referred in here, is depending on the device and operating system and may work differently as described.
- If the product does not operate properly, disconnect the cable from the USB port of your computer and reconnect it after a moment.
- To avoid the risk of a RSI syndrome (Repetitive Strain Injury), make sure that your workspace is set up ergonomically and to change your posture often: Short breaks with e.g. stretching exercises and a correct posture will help.

EN Care and cleaning

- Turn off the device before cleaning.
- Please clean the device only with a slightly damp and lint-free cloth
- Do not use any aggressive cleaning agents. Do not use solvents such as gasoline or alcohol and scouring agents or sponges.
- Please make sure that no water or any other liquid gets into the device.

GR Περιεχόμενα συσκευασίας

- 1x MediaRange Ενσύρματο πληκτρολόγιο
- 1x Εγχειρίδιο χρήσης (GR/EN)

GR Οδηγίες χρήσης και ασφάλειας

- Μην πετάτε τη συσκευή και μην την χειρίζεστε απότομα.
- Μην ανοίγετε τη συσκευή.
- Αποφύγετε την εισχώρηση τυχόν υγρών στο πληκτρολόγιο.
- Μην αφαιρείτε τα πλήκτρα του πληκτρολογίου.
- Απενεργοποιήστε τον υπολογιστή σας πριν το καθαρίσετε.
- Χρησιμοποιήστε ένα ελαφρώς υγρό πανί και κάποιο ήπιο καθαριστικό για τον καθαρισμό του πληκτρολογίου. Έπειτα στεγνώστε το με
- ένα πανί μικροϊνών.


Σημείωση: Το πληκτρολόγιο μπορεί να καταστραφεί χρησιμοποιώντας δυνατά μέσα καθαρισμού ή υγρά. Μην χρησιμοποιείτε ποτέ διαλύτες, όπως βενζίνη ή αλκοόλ, καθώς και σφουγγάρι.

GR Οδηγίες χρήσης




1. Ενεργοποιήστε τον υπολογιστή σας και συνδέστε το πληκτρολόγιο σε μία ελεύθερη θύρα USB.
2. Περιμένετε ένα λεπτό μέχρι η συσκευή να ανιχνευθεί αυτόματα και να εγκατασταθεί. (Plug & Play)
3. Η εγκατάσταση ολοκληρώθηκε. Τώρα μπορείτε να χρησιμοποιήσετε το πληκτρολόγιό σας.

GR Επεξήγηση λειτουργίας κουμπιών




Τα multimedia πλήκτρα είναι προεπιλεγμένα για τη χρήση εφαρμογών, όπως είναι το media player. Και άλλες εφαρμογές επίσης, μπορούν να λειτουργούν με αυτά τα πλήκτρα. Εάν δεν μπορείτε να χρησιμοποιήσετε τα πλήκτρα αυτά με το λογισμικό σας, παρακαλούμε συμβουλευτείτε το σύστημα βοήθειας, προκειμένου να διαμορφώσετε σωστά την εφαρμογή.

EN Getting started and operation

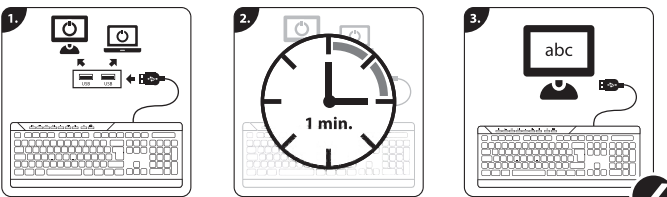

1. Turn on your computer and connect the device to a free USB port of your computer.
2. Wait a minute until the device have been automatically detected and installed. (Plug & Play)
3. Installation completed. Now you are able to use your device.

EN Explanation of multimedia hotkeys

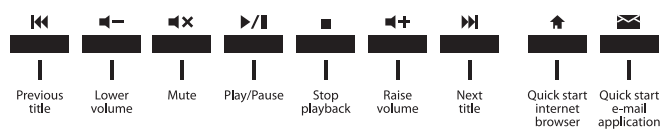

The multimedia hotkeys are set by default to use multimedia applications such as the media player. Other applications can be operated with those hotkeys as well. If you can't use the hotkeys with your specific software, please consult it's help system in order to configure the application correctly.

EN Technical specifications and product information

Model and item no.	MediaRange Corded multimedia keyboard with 114 keys; Item no.: MROS102-GR
Rating	DC 5.0V max. 70mA; USB bus-powered
Connection	USB 2.0 Connection cable; 1.5m cable length
Keys and further features	QWERTY (GR) keyboard with 114 keys; 9 hotkeys; Height of key caps: 3.6mm; Splash-proof; Practical height adjustment for excellent comfort; Plug & Play
Size and weight	450 x 170 x 25mm; ± 450g
Operating and storage conditions	Operating temperature between -5°C and 40°C; between 20% and 85% relative humidity Storage temperature between -20°C and 60°C
Durability	more than 5.000.000 keystrokes

To improve products performance, the content of this user manual may be revised without prior notice.

GR Τεχνικές προδιαγραφές

Μοντέλο και Κωδικός	MediaRange Ενσύρματο πληκτρολόγιο; Κωδικός: MROS102-GR
Ενέργεια	DC 5.0V max. 70mA; USB 2.0
Σύνδεση	καλώδιο USB 2.0, 1.5 μ.
Πλήκτρα	114 (περιλαμβανομένων 9 επιπρόσθετα πλήκτρα για Internet, e-mail και media player)
Μέγεθος και βάρος	450 x 170 x 25mm; περίπου 450 γρ.
Θερμοκρασία λειτουργίας	-5°C έως 40°C
Εκδόση πληκτρολογίου	QWERTY (GR) Ελληνικό πληκτρολόγιο

Με σκοπό τη βελτίωση της απόδοσης των προϊόντων, το περιεχόμενο του εγχειριδίου χρήσης μπορεί να αναθεωρηθεί χωρίς προηγούμενη ειδοποίηση.

GR Υπηρεσία υποστήριξης

Εάν έχετε οποιαδήποτε απορία σχετικά με τα προϊόντα μας μη διστάσετε να επικοινωνήσετε με την υπηρεσία υποστήριξης της MediaRange μέσω τηλεφώνου ή ηλεκτρονικού ταχυδρομείου: Τηλέφωνο: +49 (0) 6196 523 81 801 E-Mail: info@mediarange.de

GR Εγγύηση

Η MediaRange GmbH δεν αναλαμβάνει καμία ευθύνη και δεν παρέχει καμία εγγύηση για ζημιές που προκύπτουν από λάθος τοποθέτηση, ακατάλληλη χρήση του προϊόντος ή αγνόησης των οδηγιών χρήσης και ασφάλειας.

GR Σημαντικές σημειώσεις

Η εγγύηση δεν ισχύει εάν το προϊόν έχει ανοιχτεί. Το προϊόν αυτό δεν παρέχει εργονομικό στήριγμα. Η εγγύηση καλύπτει μόνο την αντικατάστασή του και δεν ισχύει για φυσιολογική φθορά που προκύπτει από λανθασμένη και ακατάλληλη χρήση της συσκευής, αμέλεια, ή ατύχημα. Η εγγύηση δεν ισχύει εάν το εγχειρίδιο χρήσης δεν ακολουθείται και εάν η συσκευή έχει υποστεί ζημιά από ελαττώματα άλλων συσκευών. Η εγγύηση δεν ισχύει εάν το προϊόν εκτίθεται σε κραδασμούς, θερμότητα ή υγρασία. Η MediaRange δεν ευθύνεται για παράπλευρες απώλειες ή για την παραβίαση των όρων εγγύησης. Η MediaRange GmbH δεν ευθύνεται για την απώλεια δεδομένων που μας έστειλε.

EN Support service

If you have any questions about our products, please contact the MediaRange support service: Tel.: +49 (0) 6196 523 81 80 or by E-Mail info@mediarange.de

EN Disclaimer of warranty

Please note that any warranty claim shall expire if the housing of the product has been opened. This product is not meant for a commercial use or for medical and special applications, where the failure of the product may cause injuries, death or significant material damages. The warranty only covers the replacement of this MediaRange product. The warranty is not applicable for normal wear & tear resulting from erroneous, improper use of the device, negligence, accident or incompatibility. There are no warranty claims if the user manual is not followed and if the device is damaged through improper use or defects caused by other devices. There are no warranty claims if the product is exposed to shocks, electrostatic discharges, heat or humidity effects beyond the product specifications. MediaRange is not liable for any collateral damages or consequential losses, for violation of warranty conditions or any other losses irrespective of the cause. MediaRange GmbH is not liable for the loss of data in units sent to us.

EN Implied warranty and warranty conditions

The warranty only covers material and production defects. The free warranty service covers the repair or replacement of defective parts.

All MediaRange products are subject to constant quality inspections and the legal warranty period applies, of course, from the date of purchase. Please be sure to save the sales receipt as proof of purchase.

Please understand that we cannot render any warranty services in case of:

- Misuse or improper handling, installation or use
- Disregard for the operating and safety instructions
- Damages, scratches or wear
- Modifications, manipulation or repairs by third parties
- Damages by Acts of God or transport

In case of a claim, please proceed as follows:

- Only returns accompanied with all accessories and sales receipt will be accepted.
- Contact the MediaRange Support service by e-mail or via our service hotline.
- Please make sure that the package is packed safe for transport.
- Please supply sufficient postage and send it to:
- MediaRange GmbH, Zum Quellenpark 29, 65812 Bad Soden a.Ts., Germany

GR Όροι εγγύησης

Η εγγύηση καλύπτει μόνο υλικές ζημιές και ελαττώματα παραγωγής. Η δωρεάν υπηρεσία εγγύησης καλύπτει την επισκευή ή αντικατάσταση των ελαττωματικών εξαρτημάτων.

Όλα τα προϊόντα της MediaRange υπόκεινται σε συνεχείς ελέγχους ποιότητας και η νομική περίοδος εγγύησης ισχύει, φυσικά, από την ημερομηνία αγοράς. Παρακαλούμε να είστε βέβαιοι για την αποθήκευση της απόδειξης σας. Η εγγύηση δεν ισχύει για τις παρακάτω περιπτώσεις:

- Κατάχρηση ή ακατάλληλο χειρισμό
- Τροποποιήσεις, χειραγώγηση ή επισκευές από τρίτους
- Ζημιές λόγω ανωτέρας βίας ή μεταφοράς
- Ζημιές, γρατσουνιές ή φθορά

Σε περίπτωση επιστροφής του προϊόντος, παρακαλούμε να ακολουθήσετε την παρακάτω διαδικασία:

- Οι επιστροφές γίνονται αποδεκτές μόνο όταν συνοδεύονται με όλα τα αξεσουάρ και την απόδειξη αγοράς.
- Επικοινωνήστε με την υπηρεσία υποστήριξης της MediaRange μέσω e-mail ή τηλεφωνικά μέσω της δωρεάν υπηρεσίας μας.
- Βεβαιωθείτε ότι το πακέτο είναι συσκευασμένο με ασφαλή τρόπο και κατάλληλο για μεταφορά.
- Παρακαλούμε σφραγίστε το πακέτο: MediaRange GmbH, Zum Quellenpark 29, D-65812 Bad Soden a.Ts.

Ανακύκλωση του χρησιμοποιημένου εξοπλισμού

Βάση του ευρωπαϊκού κανονισμού 2012/19/EG, όλες οι παλιές ηλεκτρικές συσκευές και ο χρησιμοποιημένος ηλεκτρικός εξοπλισμός πρέπει να διαχωρίζονται από τα υπόλοιπα οικιακά απορρίμματα με σκοπό την προστασία του περιβάλλοντος.

Copyright© 2019 MediaRange GmbH. Όλες οι μάρκες και τα ονόματα προϊόντων που αναφέρονται σε αυτό το εγχειρίδιο ανήκουν στους αντίστοιχους ιδιοκτήτες και αναφέρονται μόνο για περιγραφικούς σκοπούς.

EN Additional information

Declaration of conformity

Hereby MediaRange GmbH declares that this product is in compliance with the Electromagnetic compatibility Directive (EMC) 2014/30/EU and fulfils the requirements of the restriction of the use of certain hazardous substances in electrical and electronic equipment Directive (RoHS) 2011/65/EU and 2015/863/EU. Designed for indoor use only. The detailed declaration of conformity for this product is available by its corresponding item no.: MROS102-GR at our website: www.mediange.de/en/support/downloads/index.pmode.

Disposal of used electronic equipment

This device is subject to the European Directive 2012/19/EG. All electrical devices and used electrical equipment must be disposed of separately from household waste over the appropriate government agencies. Proper disposal of old electronic equipment helps avoid environmental damage.

Copyright© 2019 MediaRange GmbH. MediaRange and the MediaRange logo are registered trademarks of MediaRange GmbH.



MediaRange GmbH
Zum Quellenpark 29
D-65812 Bad Soden a.Ts.

www.mediange.de

MADE IN CHINA